


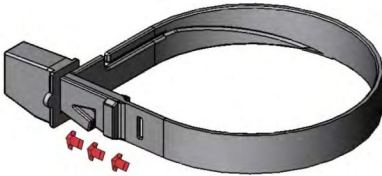

## How to close


---




## How to open

---

Rupture line to open the seal manually

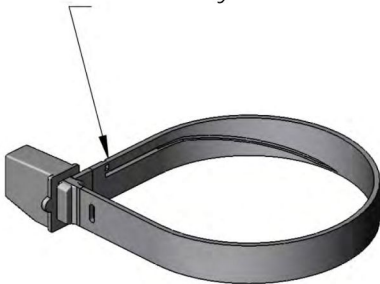

Pull the stub outward to open the seal

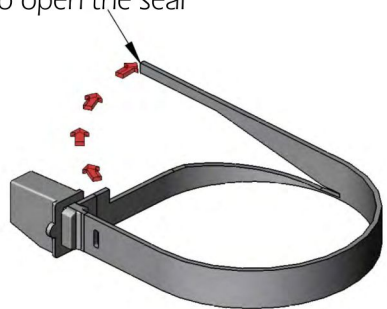

**ELC Security Products**

USA  
☎ (305) 477-2303  
e-mail: seals@elcsecurity.com

[www.elcsecurity.com](http://www.elcsecurity.com)

BRAZIL  
☎ +55 24 2263-9500 Ext. 2  
e-mail: elc@elc.com.br

