
 
## **PULL TIGHT SEALS**


## Pull tight seals

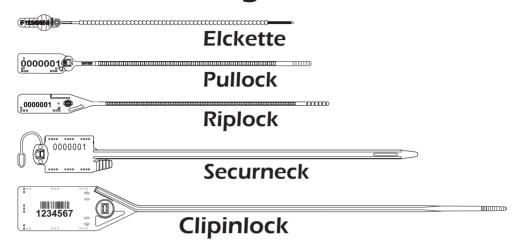

## How to seal

• Pass the tail of the seal through the object to be sealed and inset its tip into



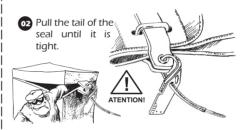


**AVOID LOOSE SEALINGS!** 

OS Confirm if the seal is locked by gently pulling it as shown in the figure.



## How to remove

Break the seal using the teaoff feature.

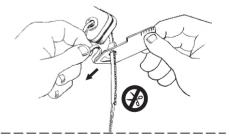

For seals without the tear-off feature, cut the tail will away of the capsule.