






Mini-Fastlock - How to Use:

Make sure the seal is intact before using it.

MINI-FASTLOCK NO WIRE

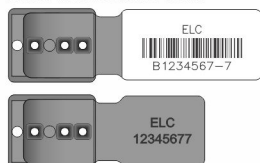

MINI-FASTLOCK WITH WIRE

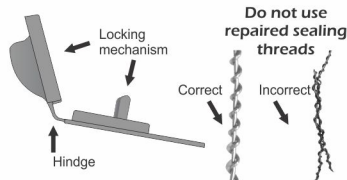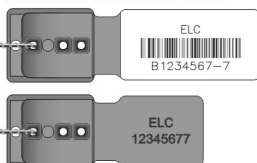

When using this product




The sealing of this product without observing these rules are your responsibility.

MINI-FASTLOCK WITHOUT WIRE

1. Pass the wire through the compartment you plan to seal and insert it on the seal's entry points "A". Both wire ends, each one into one entry point – as shown:

2. Internally twist the wire to join them and insert it through the exit hole "B" as shown here.


3. Confirm the seal is locked by gently pulling it as shown below.

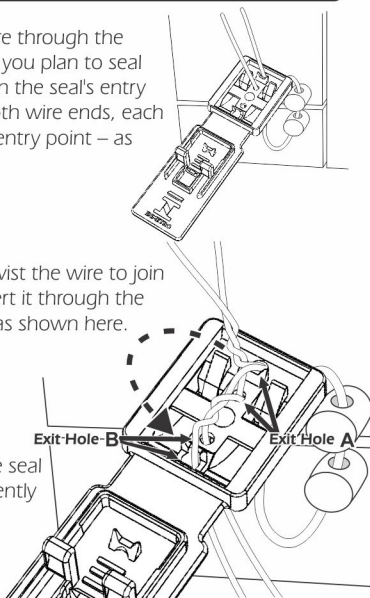

MINI-FASTLOCK WITH WIRE

1. Pass the wire through the compartment you plan to seal and insert it on the seal's entry point "A".

2. After insert the wire through hole "A", insert it through hole "B", next to the hinge, as shown here.

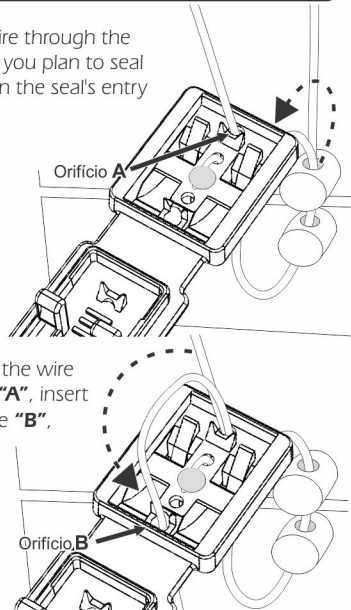


AFTER WIRE IS INSERTED



Before steps 3 and 4, make sure the wire is internally lined up to avoid the obstruction of the locking mechanism, which may cause false sealing!

Correct alignment

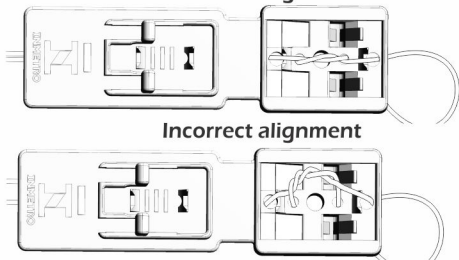

3. After wire is inserted, flip the seals tab and shut it closed by pressing it firmly into locking position until you hear the "click" sound.



The sealing is easy to do and ergonomic.


4. Cut the excess wire.





IMPORTANT RECOMMENDATIONS:

If the hinge breaks or if the seal's capsule looks inflated after closing it, verify the sealed compartment and these signs may indicate tampering.

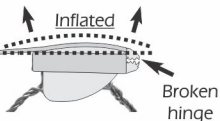

AVOID LOOSE SEALING!

There should be no loose sealing as it may allow partial entry to the sealed compartment.



MINI-FASTLOCK – RECEIVING




The receiving and opening of a sealed compartment should always have 2 persons so they witness together any tampering sign on-the-spot.

1. Before removing the seal, do a gentle pull-test to confirm the seal is holding it self on the application and not merely glued-together.




2. Look for irregularities on the sealing thread.

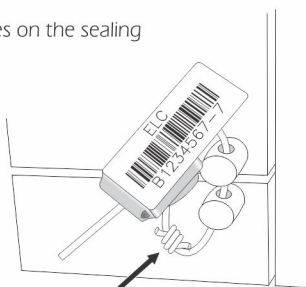

3. Double check the serial number on the seal with the one registered on the control document and make sure they are the same and that they are not forged or duplicated.

AB

Nº 9112
B1234567-7

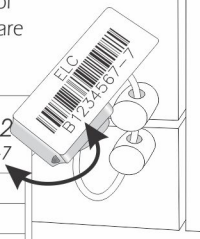

4. When removing the seal, cut it far away from the seal capsule to prevent damaging possible tampering signs.



ATTENTION!

Keep the seal until the end of the conference. Loosing the removed seal will make you responsible for any missing/fraudulent content. In case of irregularities, please report. If there are no reports of missing or fraudulent items, the seal may be disposed.

ELC is not responsible for the incorrect use of this product



IMPORTANT

When solicited, ELC can do forensic services on the tampered seals to warrant the work of further investigations.



ELC Security Products

USA
(305) 477-2303
e-mail: seals@elcsecurity.com

www.elcsecurity.com

BRAZIL
+55 24 2263-9500 Ext. 2
e-mail: elc@elc.com.br

