




# Cable seals





## How to seal

**01** Pass the cable through the compartment you plan to seal and insert it into the capsule A to activate the locking mechanism.

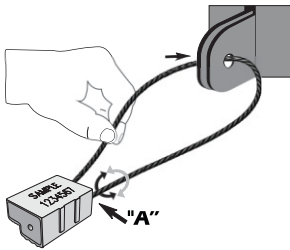


**02** Pull the cable tight to the tightest aperture possible.

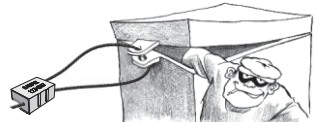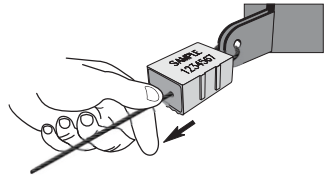


**AVOID LOOSE SEALINGS!**

**03** Confirm the seal is locked by gently pulling as shown in the figure.

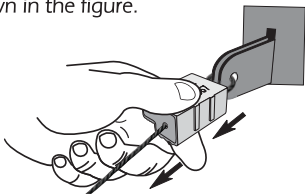

If the seal is not locked, replace it.

**04** Cut the excess cable right next to the capsule. The cable will fray, making it impossible to be re-inserted.

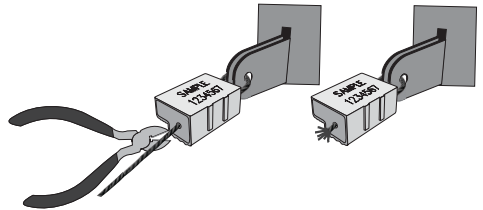

## How to remove

Use a pair of pliers to cut the seal open.

